

INSTRUCTIONS FOR FOR OIL BAFFLE PLATE

Part No. 11823, 11824, 11825

For best sealing, use a pan gasket coated with "silicone sealant" both above and below the plate.

Note: By its nature, this plate slows the return of engine oil to the oil pan. It is therefore VERY important to maintain the correct oil level. However, do not significantly overfill the sump, or the front counter weight may aerate the oil, defeating the purpose of the plate. If required, use an increased capacity oil pan.