

# RX-8 Fog Light Relocation Kit


PN 67114

## Installation Instructions

**Tools Required:** 10mm Socket/Wrench, Phillips Screwdriver**Estimated time for completion:** 1 hr**People required:** 1

**Before you start the installation process, please read through the following steps thoroughly.**

1. The installation of the RX-8 Fog Light Relocation Kit requires the removal of the nose. Remove the nose per the Nose Removal Instructions, then remove the fog lights from the nose. Place a piece of tape on each lamp as shown in FIG 1 to designate the "driver" and "passenger" side lamps.

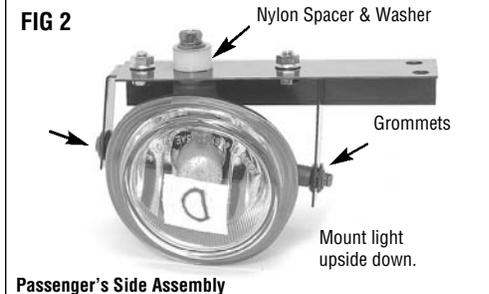

2. Using the 10mm long bolts, nuts, washers, assemble the lamp bracket assemblies as shown in FIG 2 & 3. Note the orientation of the lamp unit as shown.

Make certain the pivot arm of the foglights are fully seated in the rubber grommets. Secure the arm of the bracket using the original Phillips head bolt. Secure the "top" of the light to the bracket using the original bolt, supplied nylon spacer and washer. (**Note: The lights will be "inverted" and used on the opposite sides of the car during this installation.**)

3. Using a Phillips head screwdriver, remove the plastic clip that retains the plastic shroud from both sides of the bumper bar as shown in FIG 4.

4. Using the supplied 15mm long bolts, reach through the opening in the end of the bumper bar and place two (2) bolts into the hole positions as shown in FIG 5. (Utilize the rearward hole that was used by the plastic clip that was removed in the prior step.)

5. As shown in FIG 5 & 6, orient each light assembly into position and attach each unit to the bumper support using the two (2) bolts installed in the prior step.

4. Connect the electrical connectors and test the lights prior to the installation of the nose. If you need to adjust the alignment of the light beam, loosen the top securing bolt and pivot the light either "up" or "down" as needed. FIG 6

5. Proceed with the nose installation.

